



ATK-25U-BK/ATK-25U-S User's Manual



! **ATTENTION**
New HDD Must Be
● Formatted Before Use

Package Contents:

- User Manual
- ATK-25U-BK / ATK-25U-S Enclosure
- Leather Case
- Screw Driver
- USB Y Cable
- Screw Pack


Features:

- 2.5" SATA External Enclosure
- Up to 480 Mbps Data Transfer Rate in USB 2.0
- Plug & Play
- Support Hot Swap
- Windows & Mac OS Compatible
- Rohs Compliant

Specs:

- Model: ATK-25U-BK / ATK-25U-S
- H.D.D. Support: 2.5" SATA Hard Disc
- Dimensions: 2 3/4"W x 5 5/6"L x 5/8"H
- Support OS: Windows 98SE/ME/2000/XP/Vista
Mac OS 10 x & Above
- Interface: SATA to USB 2.0
- USB Transfer Rate: Up to 480 Mbps

- 4. Insert the HDD and PCB board back to the aluminum case.**

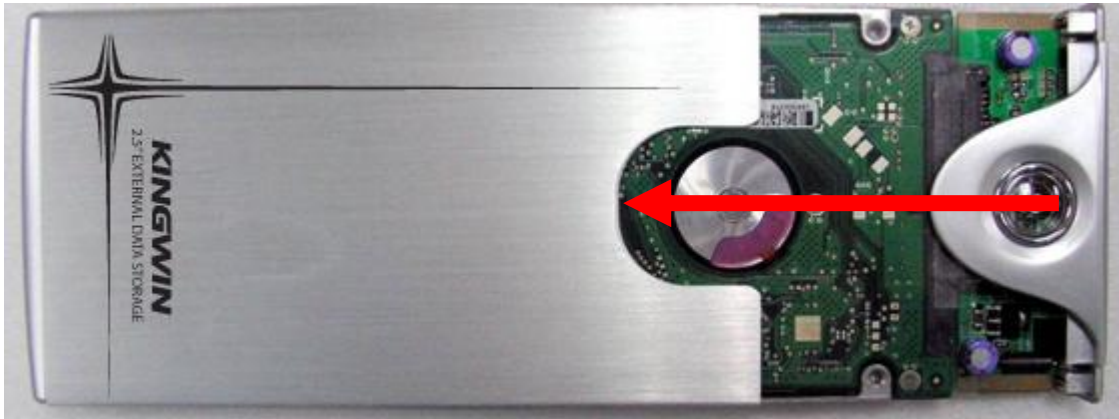

- 5. Secure the tray, screw the tray and the housing together using the provided screw driver.**



Driver Installation

Windows ME / 2000 / XP / Vista

No drivers are necessary when using Windows ME/XP/2000/Vista. If the drive does not appear under “my computer”, please be sure to partition your hard drive.


Windows 98 /98SE

1. Go to http://kingwin.com/download_center/uploads/215_98Driver_1.0.0.6.zip
2. Follow instruction for installing the 98 driver.


HDD Formatting Guide

- You may format your external HDD through USB2.0 connection.
- Please make sure your external HDD is turned on and well connected to the PC before formatting the HDD.


1. Right-click “My Computer” icon and select the ”Manage” column.

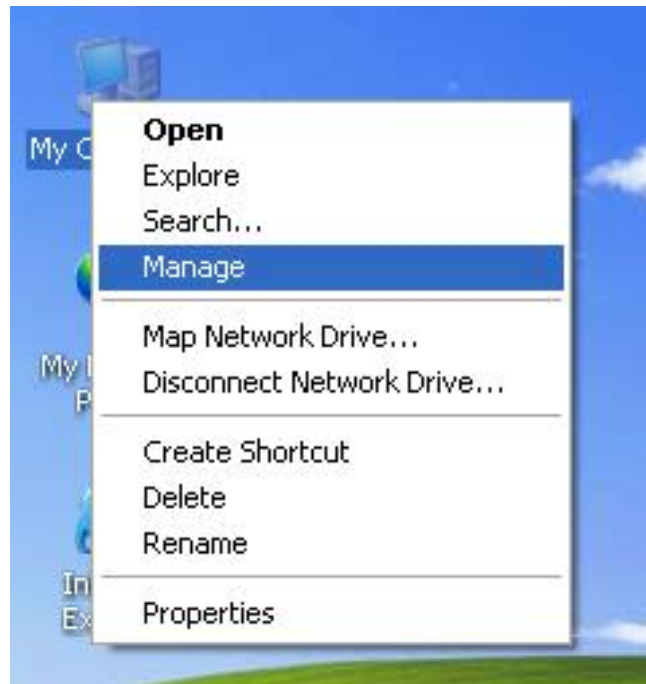


2. Select “Disk Management” and you will see your External HDD showed “Unallocated”.

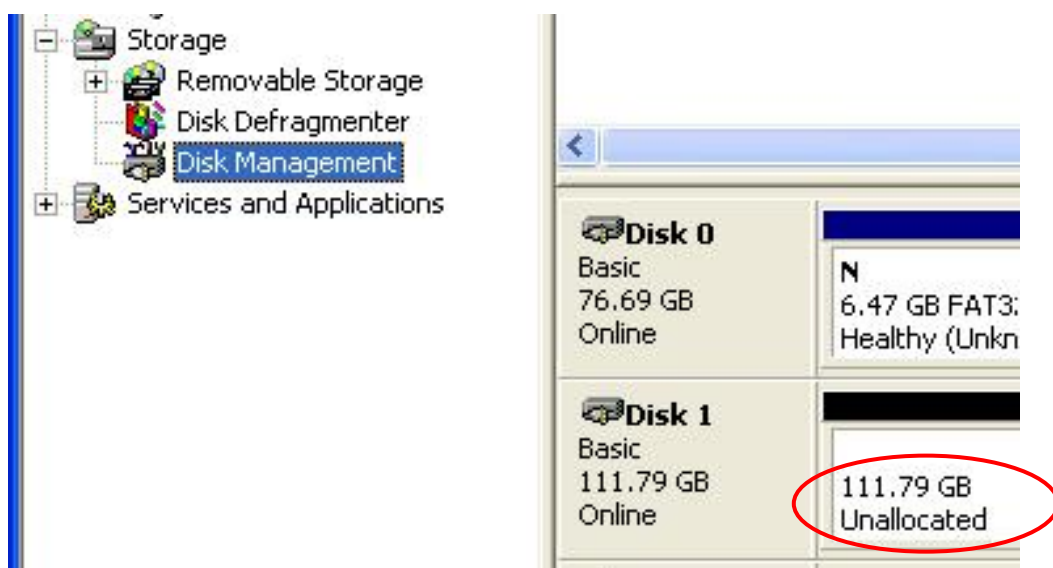


3. Right-click on the “Unallocated” block and selects “New Partition”.

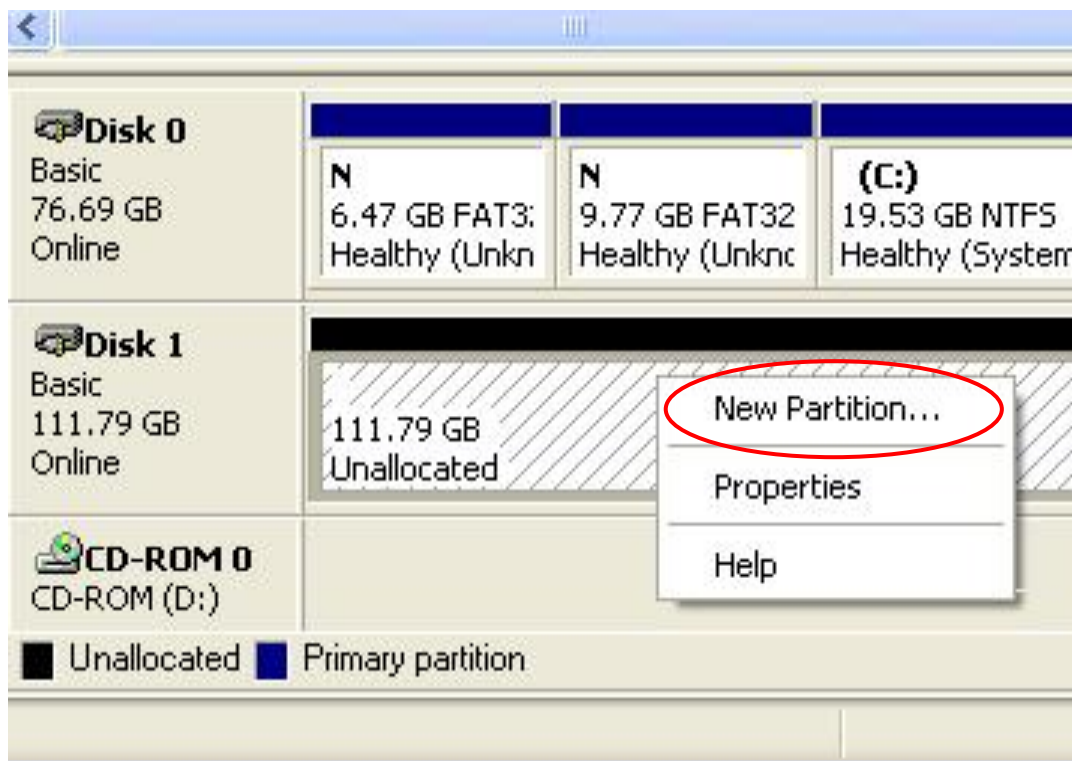

4. The “New Partition Wizard” will appear. Please follow the instruction of the wizard to complete.

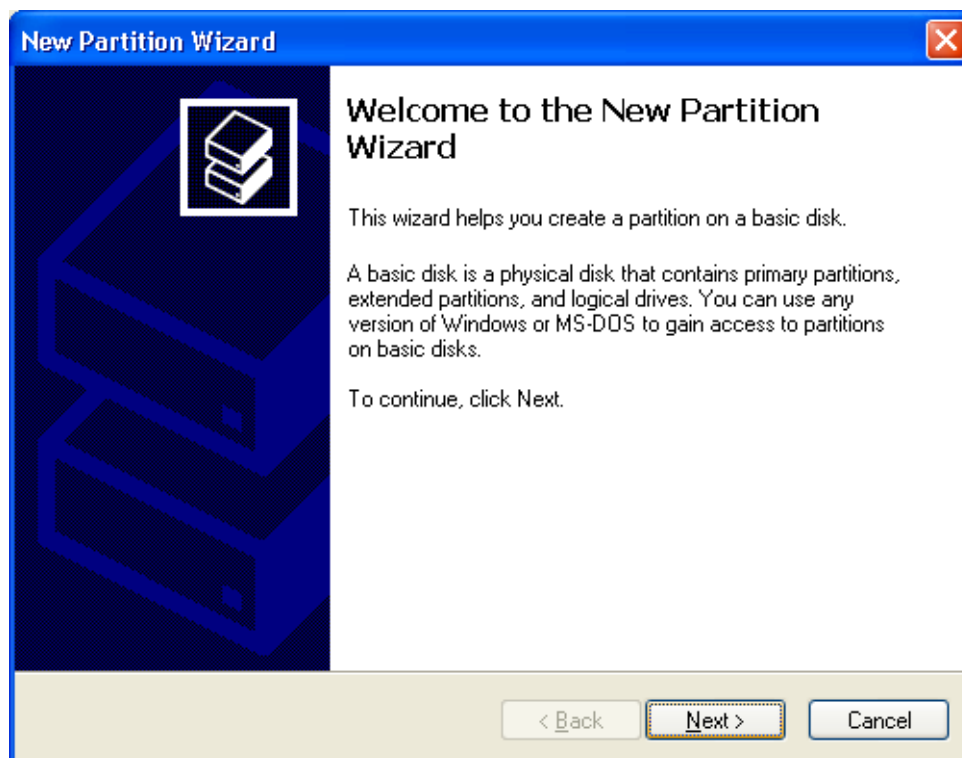

5. When new partition is completed, the external HDD will be recognized as a “New Volume”.

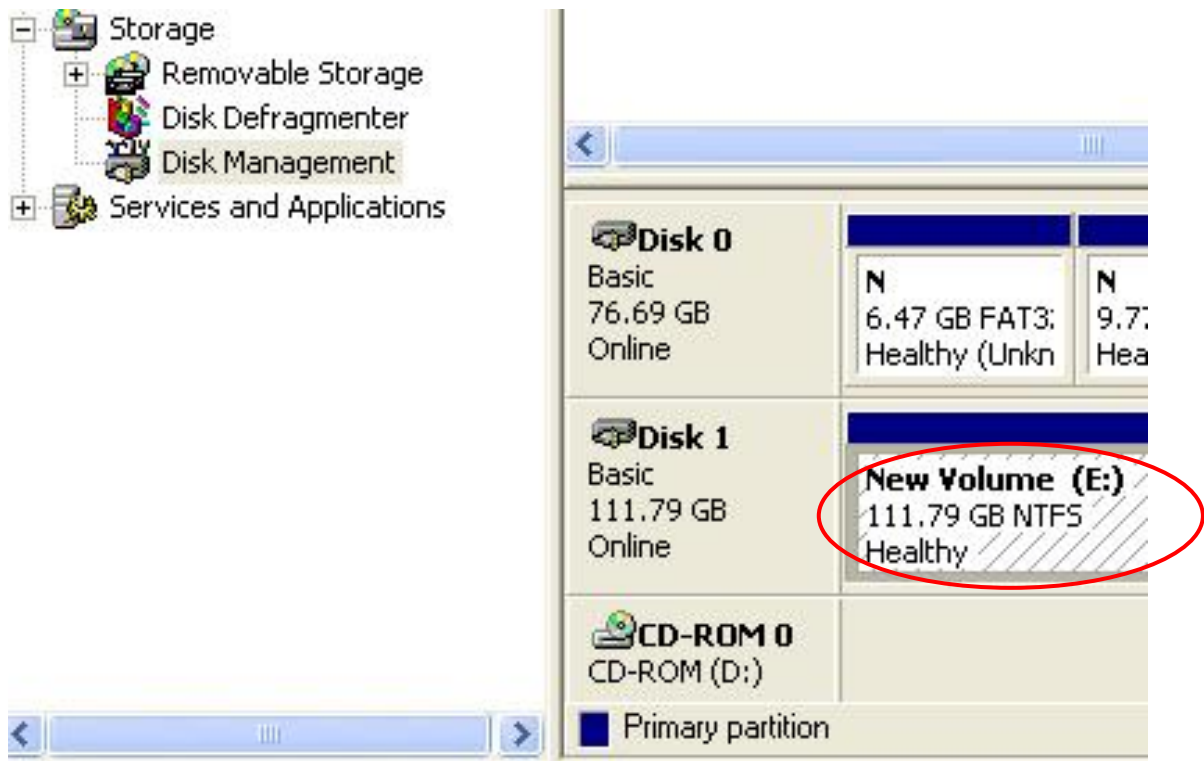

6. Double-click “My Computer”. You will see the new volume appears on your PC.

